


AUTOMATIC SOLUTIONS

HOW TO

Connect battery backup to the ALT624KP CT10224

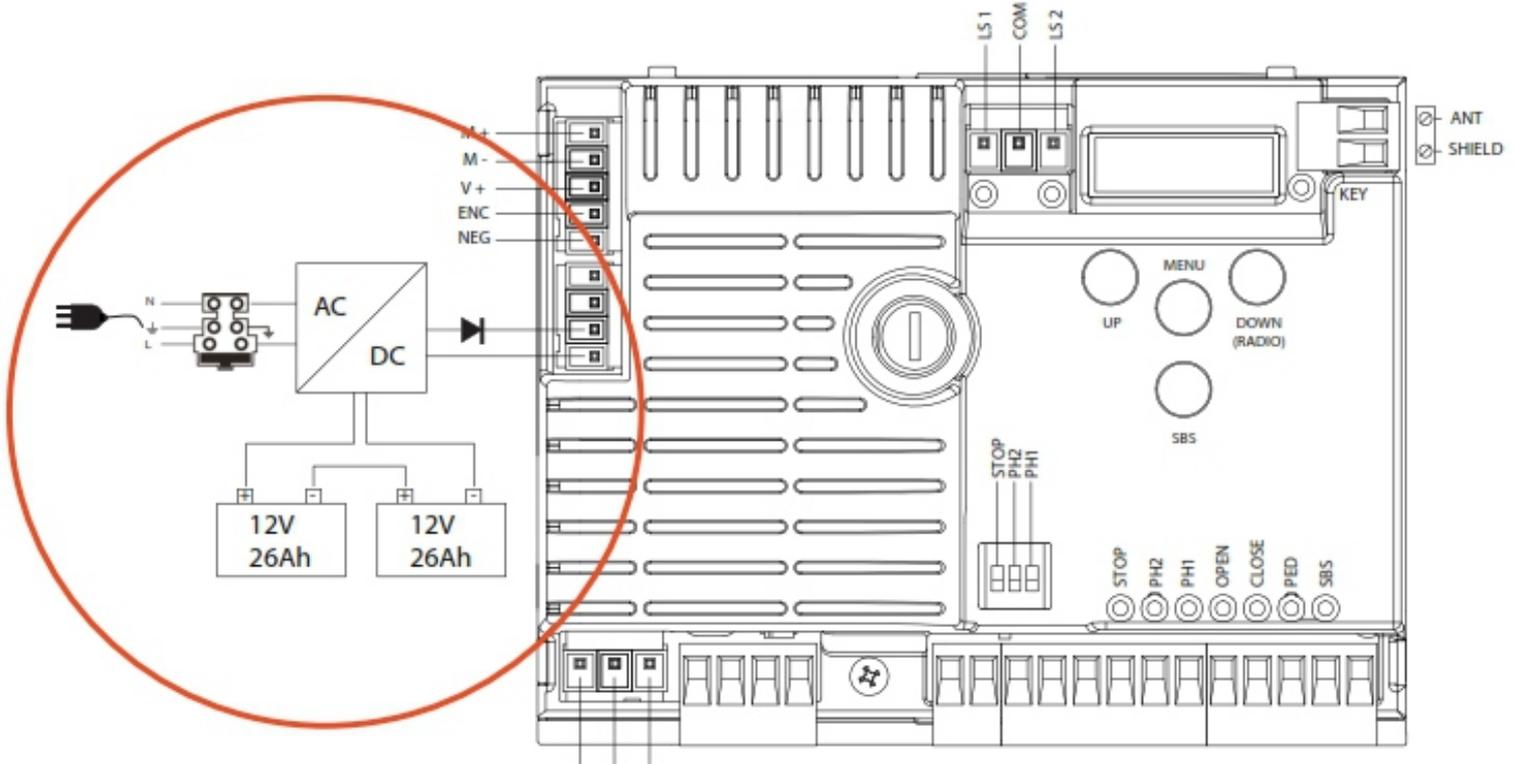

To connect battery backup to the ALT624KP boom gate you need to provide a charging source whether it be battery charger or solar. Connect from the batteries to the control board as shown using a diode between positive on the battery and positive on the board.

