

Master reset for keypad (straight into programming mode):

1. Switch ON power to the keypad.
2. Link across the EG IN terminal and (-) GND terminal for two seconds until a double beep is heard.
3. Enter the following code: 8080**
4. Now enter: 010000# to reset the programmer's code to 0000, if you would like to change this to anything else please follow the attached manual.

The keypad should now be in programming mode, ready to accept new data.