

AUTOMATIC SOLUTIONS

QUICK START INSTRUCTIONS

IMPORTANT - READ THIS FIRST

These instructions are intended as a quick start guide and should be used in conjunction with the manufacturer supplied instructions. These instructions provide a basic setup and are based on common installations in Australia.

KEYPADP6

Carefully remove keypad from box and put to one side the instructions supplied. Use a fine flat bladed screwdriver to remove the front cover plate. Next take a medium Phillips head screw driver and unscrew the two counter sunk screws.

You will find the unit will now separate into two segments. You will notice two lithium batteries and a small jumper on the rear of the unit. Carefully take the jumper off the pins and reposition it across the alternative two pins to turn the unit on. An audible beep should sound letting you know that power is on.

The keypad by default is in STANDARD20 mode which is compatible with older transmitters and receivers but needs changing to ROLLING CODE for newer systems. To change to ROLLING CODE enter – “00000 + OK + 99999 + OK + 6” (NB: No beep on second OK)

Remove the cover from your receiver or main control board if your receiver is inbuilt. You should now have access to the programming buttons.

Decide on a four digit PIN number. Next press and release the programming button “P1” on the control board or receiver. A red LED will light – go out and light again to put the receiver into learn mode.

In the next ten seconds key in your four digit PIN and OK on the keypad.

The red LED on the control board will go out indicating the receiver has accepted the code and exited programming mode.

You can now test your pin number.

Put keypad back together and mount.

You may repeat the exercise for other codes.

