


TIPS & TRICKS

LOGICCA310

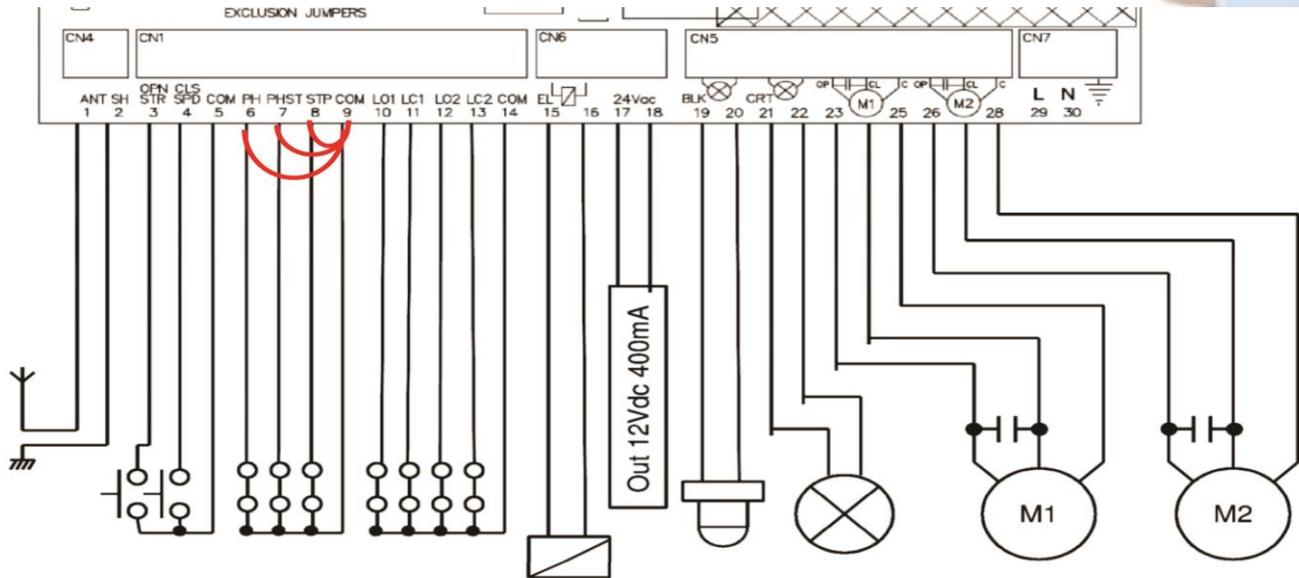

- **TIP** – You must have good physical stops in both opening and closing. The CA310 uses these stops during programming and operation.
- **TIP** – You need to fit three small loops of wire to your safety inputs to make anything work. These can be removed later if you install safety devices to these input terminals. But for now take three pieces of light gauge wire (speaker or telephone wire is good) about 50mm long and strip both ends 7mm and insert them as above from 6,7,8 to 9.
- **TIP** – Always concentrate on connecting your motor/s and programming these first before adding any accessories. Accessories like keypads and photocells should be added one at a time after you have your gates setup and operating correctly.
- **TIP** – During programming if either or both gates do not operate in the correct direction simply stop the programming and at the control board reverse the motor wires of the motor/s going the wrong way. Invert the motor connections on the terminal block (terminals 23 and 24 for motor 1; terminals 26 and 27 for motor 2). Then power back up and restart programming.